

VP-1231-CE7 Quick Start

Version 1.0 December 2015

Supported Modules

➢ VP-1231-CE7

What's in the box?

In addition to this guide, the package includes the following items:



Technical Support

VP-1231-CE7 User Manual:

CD:\WinPAC_AM335x\VP-x231\Document\

ftp://ftp.icpdas.com/pub/cd/winpac_am335x/vp-x231/document/



2 Installing Expansion I/O Sockets

The case (a socket and a top case) is included in the package.

1) Take the socket out from the case.

2) Padlock the bottom of the socket into the VP-1231-CE7.

3) Slide the socket into the VP-1231-CE7 until it clicks.



3 Inserting the I/O Module

VP-1231-CE7 supports various types of I/O expansion modules for interfacing many different field devices.

For more information about I/O expansion modules, please refer to: <u>http://www.icpdas.com/products/PAC/winpac/io_support_list.htm</u>

- Hold the I/O module vertically and align the socket.
- Carefully press the I/O module onto the socket.





If you do not expand the I/O module full, please keep the top case of the unused slot to protect the backplane from dirt, dust and damage from foreign objects.

4 Mounting the VP-1231-CE7

VP-1231-CE7 can be mounted on a panel of maximum thickness 12 mm. Adequate access space can be available at the rear of the instrument panel for wiring and servicing purposes.



To ensure proper ventilation for the VP-1231-CE7, leave a minimum of 50mm space between the top and bottom edges of the VP-1231-CE7 and the enclosure panels.

- 1) Prepare the panel and cut the hole to the specified size.
 2) Attach the VP-1231-CE7 to the cut-out hole.
- **3)** Insert the panel mounting clips into the upper and lower ventilation holes.



4) Screw the panel mounting clips to the panel.



Tips & Warnings



Recommended Screw Torque:

3.4 ~ 4.5 kgf-cm.

5 Configuring the Boot Mode and Connecting

to PC, Monitor and Power Supply



6 Using PAC Utility to Manage the VP-1231-CE7



7 Using DCON Utility Pro to Configure I/O Modules

1) Double-click the DCON	N Utility Pro on the deskt	op 🗾 🚺		
2) Click the	utton	Utility o 2.0.0.0 for CE7 arm(WP		
3) Configure the communication settings				
	Start	Address 0 End Address		
COM Port Option	Timeout	× Addr Baud Rate Chede		
COMPORT COM0[Backplane]	200 ms	······································		
COM0[Backplane] ec	ksum Format			
COM2 COM4	O E,8,1 O O,8,1			
OK Cancel				

2) Click the



button

3) Click the module name to configure the I/O module



8 Changing the User Interface Language

n Programs	٠	1) Click Start menu, point to S	Settings, click Control
☆ F <u>a</u> vorites	٠	Panel, and then click Regional Settings	
Documents	٠		
👺 <u>S</u> ettings	×	📴 <u>C</u> ontrol Panel	
🖅 <u>R</u> un		📚 Network and Dial-up Connections	Regional
💦 Start		🛃 <u>T</u> askbar and Start Menu	Settings

2) Click User Interface Language tab, choose to your local language, and then click OK

